

# MiniFinder® Pico

## User Manual

English



# Thank you!

Thank you for purchasing a MiniFinder® product. We believe you made the right choice. MiniFinder® Pico is full of smart features that help you monitor, protect and locate your loved ones remotely.

Before you start using your Pico, **please read this manual in its entirety.**

## PACKAGE CONTENTS

1. MiniFinder Pico
2. Micro USB charging cable
3. Charging station (**accessory**)



## PRODUCT OVERVIEW

1. On / Off & Call button
2. USB charging port
3. Panic button (SOS)
4. Microphone
5. GPS LED light
6. GSM LED light
7. Speaker
8. Charging contact pins

 


## PRODUCT MANAGEMENT


- A. Please charge your device for 4 hours before using for the first time.
- B. During charging, the blue LED is steady. (Red light on the charging station).
- C. Blue LED light goes out when fully charged. (Red light goes out on the charging station)
- D. **START** the unit by pressing ON / OFF button for 3 seconds.
- E. **TURN OFF** the device by **pressing and holding** SOS and ON / OFF buttons for 3 seconds.

## EXPLANATION OF LED LIGHTS

### GREEN LED:



 Slow blink = *Searching for GSM network*



Single blink = *Connected to GSM network*



Double blink = *Connected to GPRS network*




Steady light = *No or faulty SIM card*

### BLUE LED:



 Slow blink = *Searching for GPS signal*



Single blink = *Connected to satellite*



Steady blink = *Charging*



No light = *Sleep mode or fully charged*

## DOWNLOAD MINIFINDER GO APP

To set up and track your MiniFinder® Pico, you need to download MiniFinder GO Tracking System APP.



If you read the documentation on your mobile phone, please click on the link below to download the APP.

Apple iPhone: <https://apple.co/2P3oYxN>


Android: <http://bit.ly/2IengsS>



Download the app by searching the “**Minifinder GO GPS Tracking**” in Apple App Store or Google Play store. Install the app to log in with your created or assigned login details.

## APP Overview


After logging in the MiniFinder GO APP, you will see the view as shown below. This consists of 10 different parts:

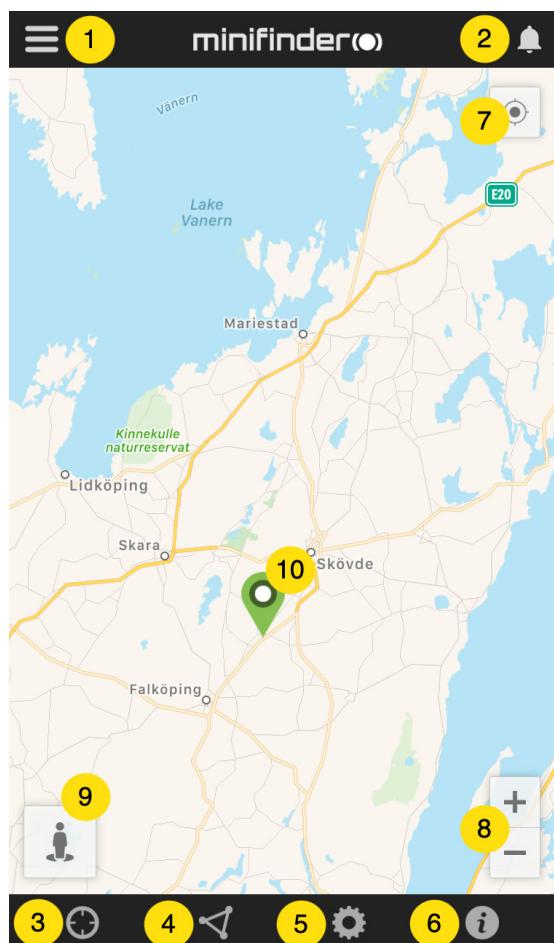

1. Menu (Device list)
2. Alarm notification
3. Show map
4. Create / Edit GeoFence
5. Applications settings
6. Application info & Help
7. View the position of my mobile phone
8. Zoom in / out
9. View street information of a selected GPS device
10. GPS device location indication on the map

## Menu/Device List


Click the menu icon to open the menu. The menu consists of one or more devices (GPSs) depending on how many licenses you have in the system.

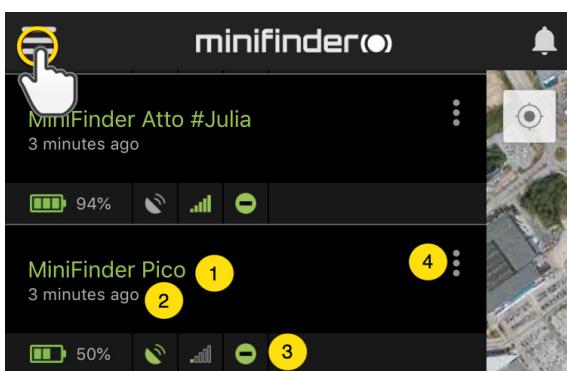

1. Unit name
2. Time for the last position
3. Status icons:  
Battery, GPS signal, GSM signal and motion
4. Action menu (history, settings, ...)

## Device Status

A GPS unit can have three different colors indicating status. Green (**Online**), Orange (**Passive**), Red (**Passive**) and White (**Offline**).

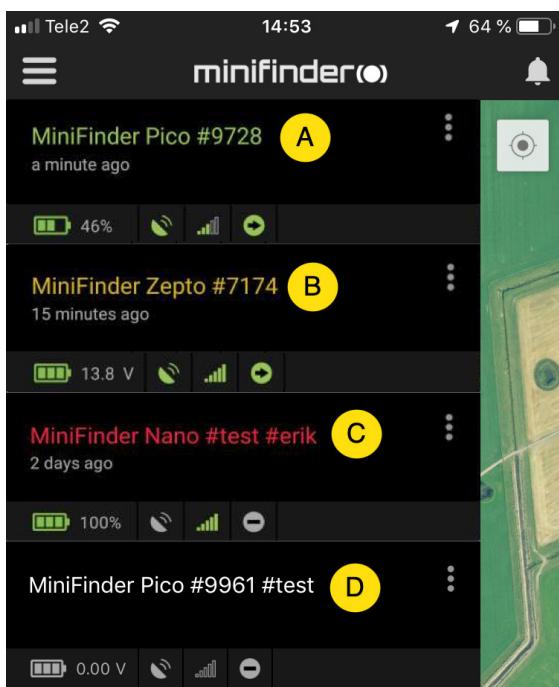

- A) Green: The device is online and sending position right now.
- B) Orange: The device is passive and has sent last position more than 10 minutes ago.
- C) Red: The device is passive and has sent last position more than 1 hour ago.
- D) White: The device is offline.



 Regardless of the device's status, you can always press the device row to display the latest position on the map.

## Alarm Notification

MiniFinder GO APP supports various types of alarms: Geofence alarm, Fall alarm, SOS / Panic alarm, Low battery alarm and speeding alarm. All alarms send an alarm notification to the phone's or tablet's screen. Audio alert, vibration and flashing alarm can be activated when opening the APP.

Images below show examples of alarm notifications:


- An example of notifications on a phone's screen.
- A flashing bell at the top right corner of the app.

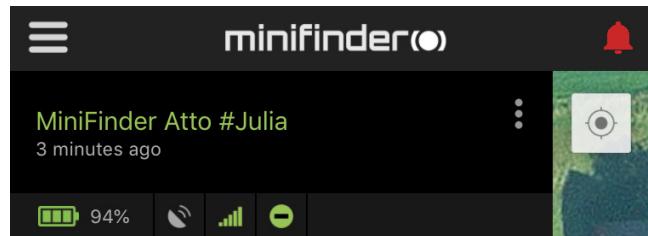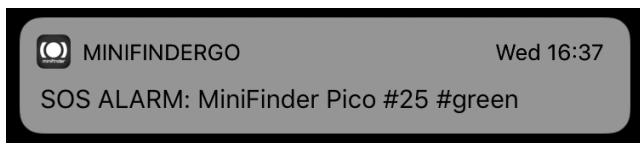

- Click on the flashing alarm bell to see active alarms. Click on active alarms to confirm and move them to the alarm history.

## Action Menu



At the far right of the row of units is an Action Menu (three vertical points). In the Action Menu you can see history (History), call (Call) and settings (Setup).

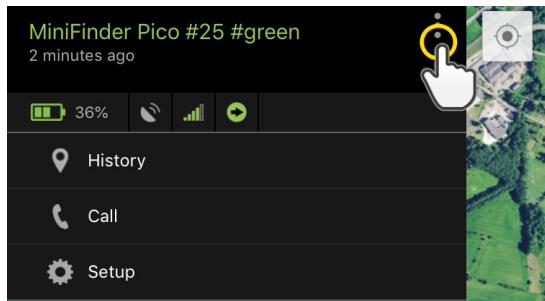


## History

See positioning history on the map based on date and time.

- Start by clicking the Action Menu (1), then click "History" (2).
- Select a time period and then click "View History" to display the device's positioning history.

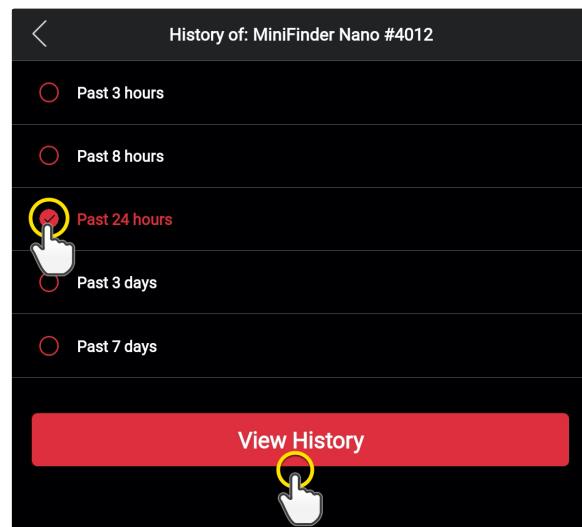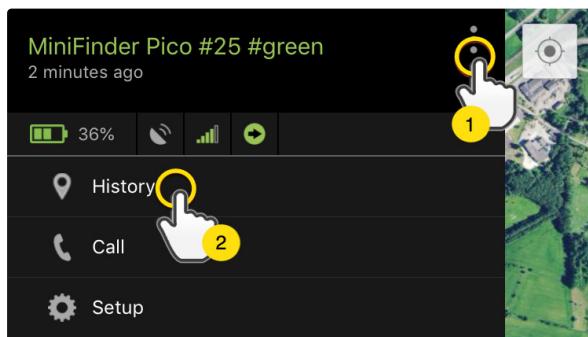


- The following information is displayed for positioning history:

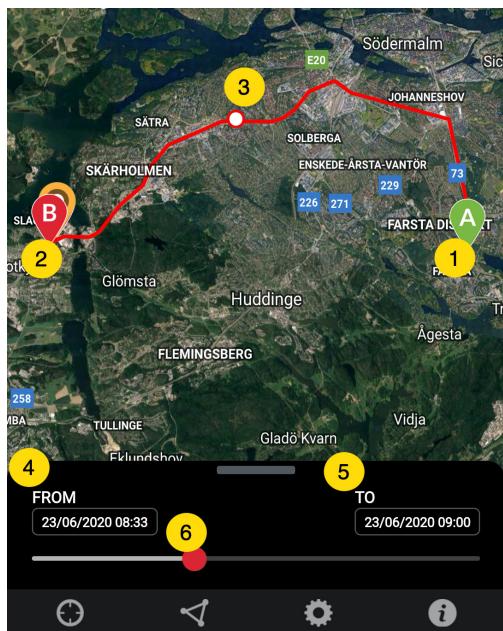


1. A is the start position
2. B is the end position
3. Indicates a particularly selected position
4. The start date and time
5. The end date and time
6. Drag the blue dot to see a particular position (3) on the map.

- When bringing up the sub screen, the detailed statistics are shown, including total distance, total time and max speed. To clear the selected history, simply click "Clear History"

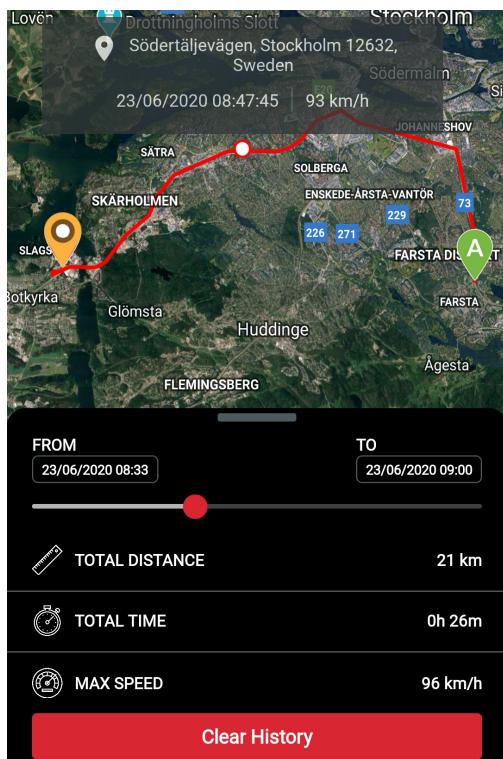

## Call the Device



To ring your device from your telephone, simply click on Action Menu (1) and then click on "Call" (2) to start calling.

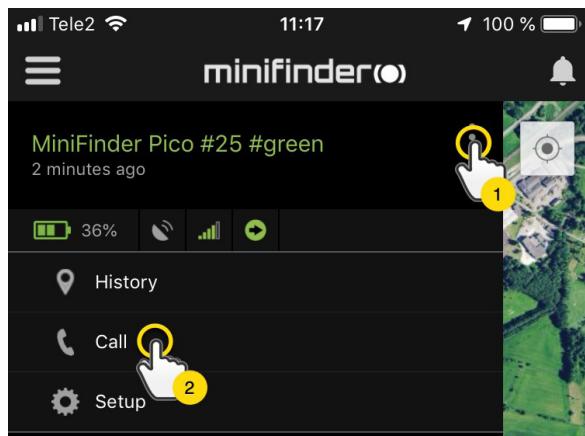

## Rename Device

Edit device name through Device Setting.



Click the Action Menu (1) and then click on the "Setup" (2). Edit device name (3) with your preference. Then click "Apply" (4) to save the changes.

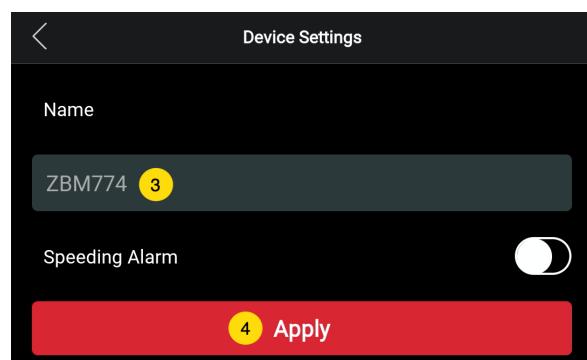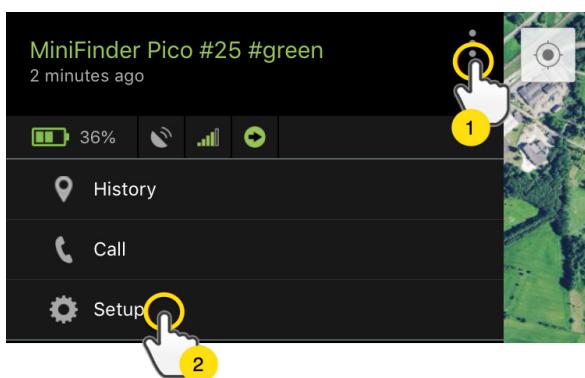


# Authorize Telephone Numbers

To be able to call or receive calls from the device, one or more phone numbers need to be authorized in the device. Telephone number 1 is used as the first alarm receiver of the panic alarm (SOS button). Only phone number 2 receives calls from the call button.

- Open MiniFinder GO APP, click the Action Menu (1) and then click on the "Setup" (2).

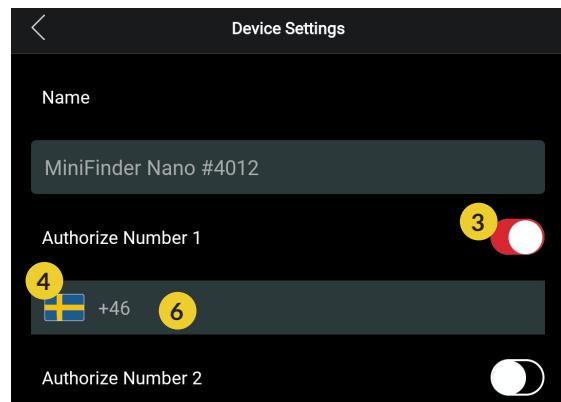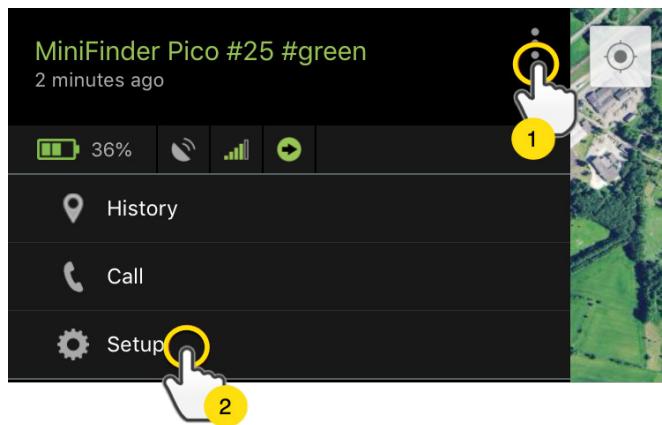

- Enable authorization (3).
- Click on the flag (4) to select a country code.
- Select a country in the list (5).
- Enter a telephone number (6) to receive alarms.
- Click "Apply" to save the settings.

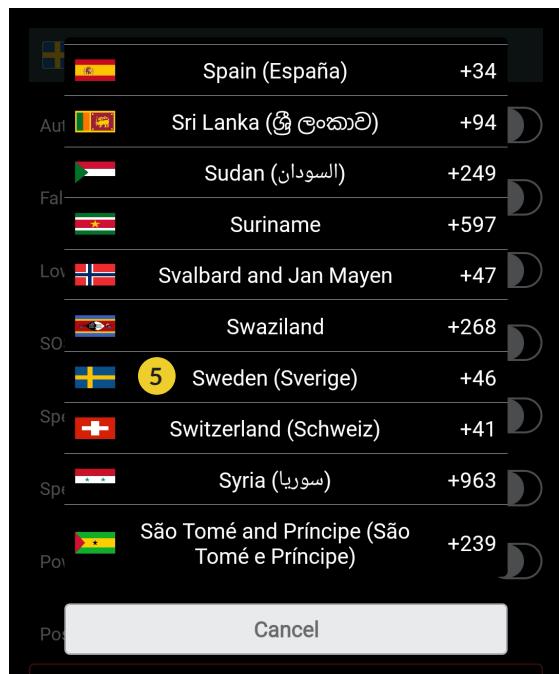


# Make A Call

**To make a call**, please press and hold the on / off / call button for 3 seconds. The unit emits an indication, the green LED starts blinking, and begins dialing to the authorized phone number 2. To end the call, press the SOS button.

## Fall Alarm

An accidental fall can cause devastating consequences. When an accidental fall occurs, the MiniFinder® remote sensor sends an alarm to the APP in the form of an alarm notification on the mobile device's screen and an alarm bell in the APP.

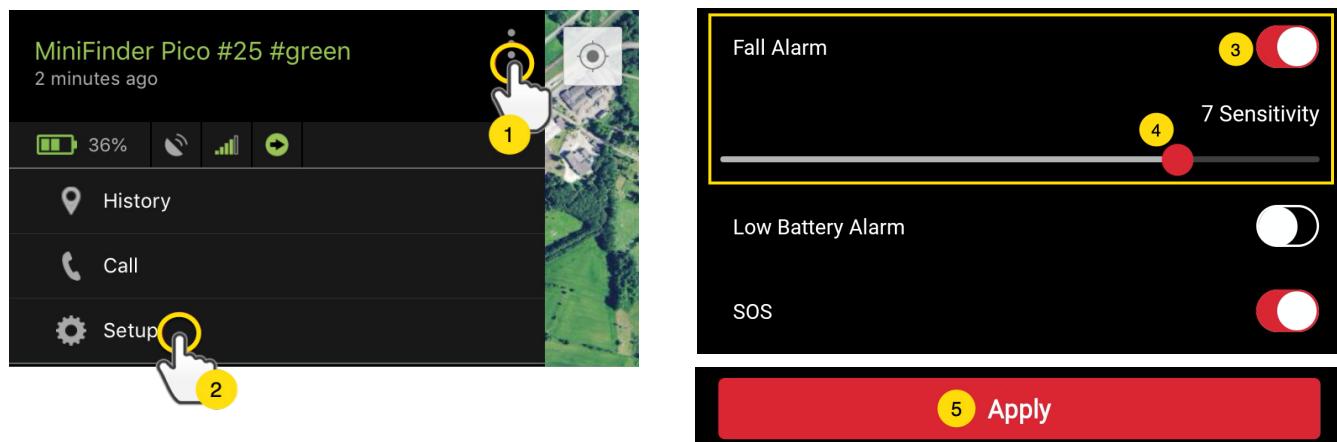


- To enable the Fall Alarm, click the Action Menu (1) and then select "Setup" (2).
- Activate "Fall Alarm" as shown below and click "Apply" to save the settings.

 To end an ongoing fall alarm, press SOS button once.

## Low Battery Alarm


 If a device's battery level falls below 20%, you are alerted with an alarm notification and the battery icon in the menu starts flashing to indicate low battery level.

- To activate Low Battery Alarm, click Action Menu, and select the "Setup".
- Turn on "Low Battery Alarm" and then click "Apply" to save the settings.

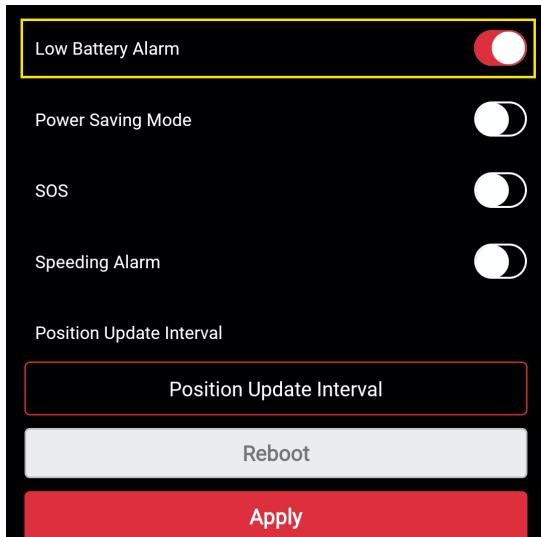

## SOS

After SOS function is activated, an alarm notification is sent to the MiniFinder GO APP if the SOS / panic alarm is activated on the device. The alarm is followed up with telephone calls to authorized telephone numbers or a local alarm center.

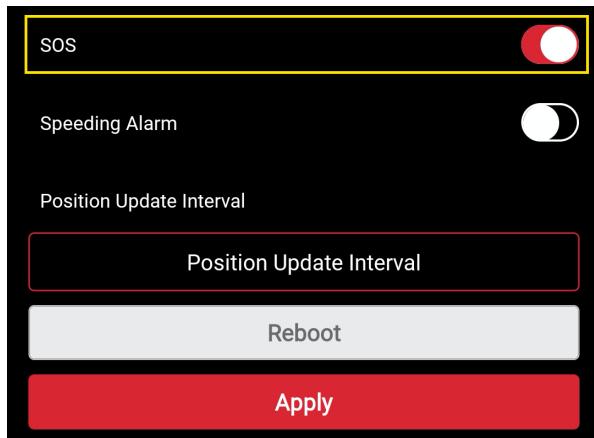

To enable SOS, click the Action Menu and then select "Setup", and activate "SOS" according to the image above and click "Apply" to save the settings.

## Alarm via Panic Button (SOS)

**Press and hold the panic / emergency button for 3 seconds.** There will be a beep sound and the unit's green light starts blinking. A SOS message is sent to the MiniFinder GO APP and is displayed as an alarm notification on the mobile device's screen.


When the SOS alarm is activated, the unit starts dialing authorized telephone numbers according to chronological order. If MiniFinder fails to connect the call to the first phone number, dialing rings the next authorized phone number.

The dialing cycle is interrupted if the device does not connect to any alarm receiver. The process resumes after 5 minutes and continues until someone receives the alarm.

**To end the call,** press the panic / emergency button.

## Speeding Alarm


Click Action Menu (1) of the device that you want to set Speeding Alarm to, and then click "Setup" (2).

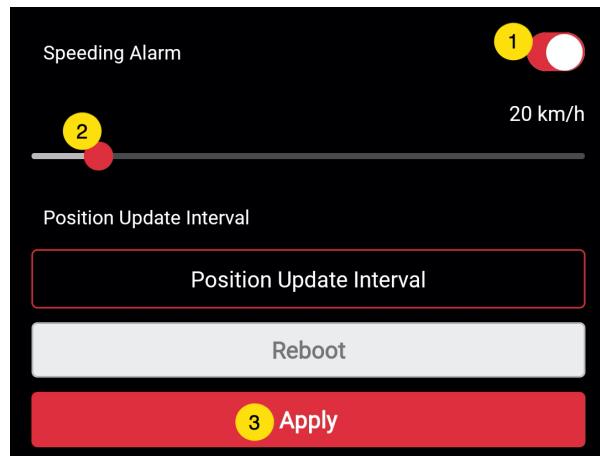

Activate "Speeding Alarm" (1). Drag the circle to a desired speed (2). Finally, click "Apply" (3) to set the alarm for speeding.

## Power Saving Mode


Power Saving Mode is an effective way to optimize battery life. GPS and GSM modules will only be activated in case of an alarm or event occurs, otherwise, stay deactivated.

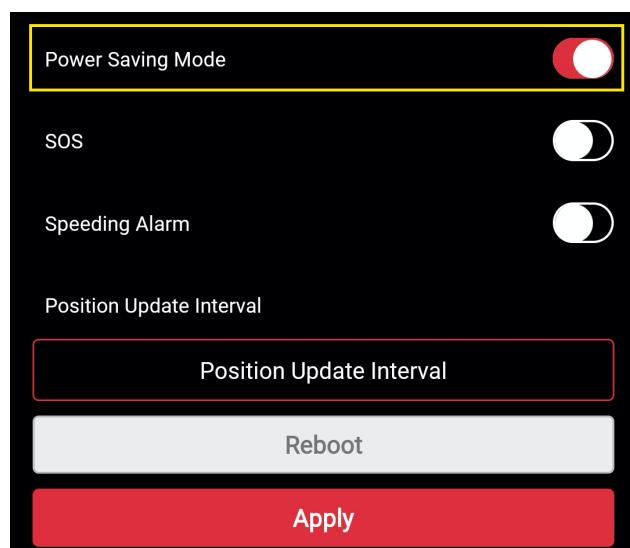

Enable deep sleep mode by clicking on the Action Menu and then selecting "Setup". Turn on "Power Saving Mode" and then click "Apply" to save the settings.

# Position Update Interval

The device can be tracked by different time interval depending on different requirements. Longer time interval consumes less battery usage.

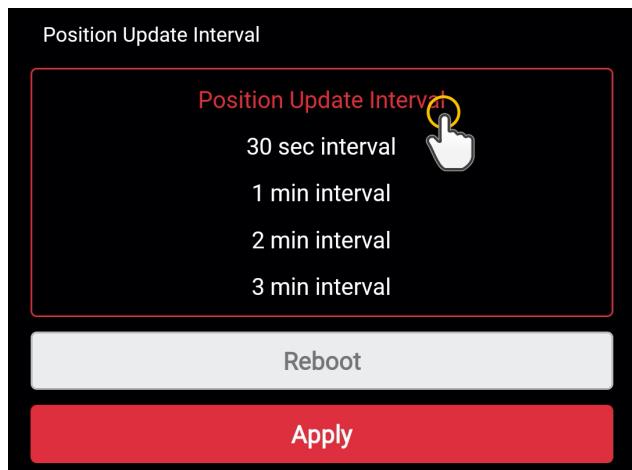


To change the update interval, click on the Action Menu and select "Setup". Then click "Position Update Interval", select a desired interval and click "Apply" to save the settings.

# Geofence Alarm


Geofence is a virtual limited area on the map. When a GPS device leaves a defined area, an alarm notification, a ringing and an e-mail are sent according to the preferences in the setting.

## 1) Create a GeoFence

- Start by clicking on the Geofence tab (1) and click "Create" (2) as shown below.

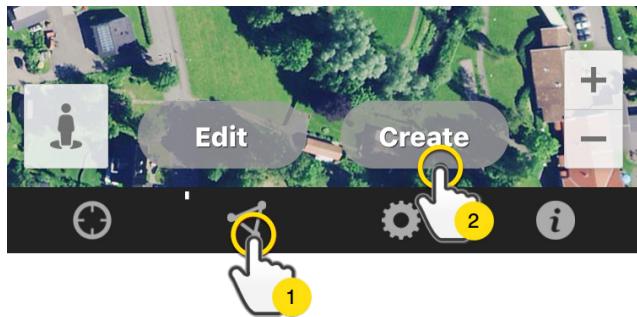


- Then draw an area as a GeoFence on the map.

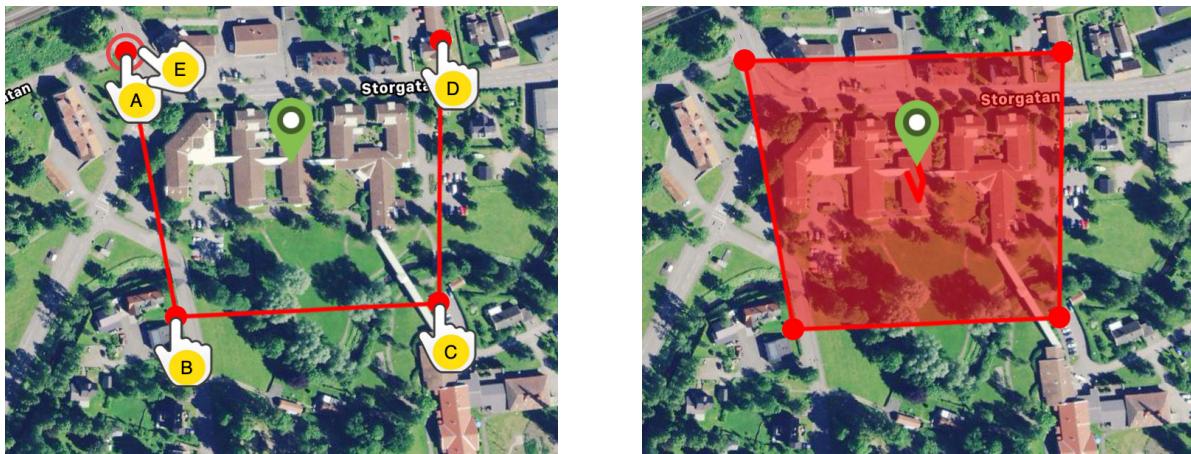


- Press once on the map as starting point of the area.
- Press again to place the second point of the area.
- Press again to place the third point of the area.
- Press again to place the forth point of the area.
- Complete the area by pressing the starting point (point A).
- Name the area and select which units to connect, select "Enter" or "Leave" or both to create an alarm. Then click "Create" to finish the process.

 If you are not satisfied with the location of a point, click "Back" to delete or hold to delete all and start over.

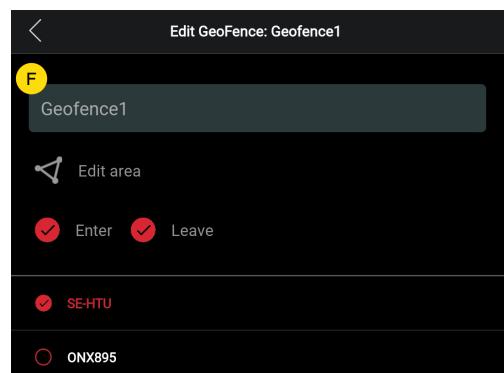


## 2) Edit a GeoFence

- Start by clicking on the GeoFence tab (1) as shown below. Then click "Edit" (2).

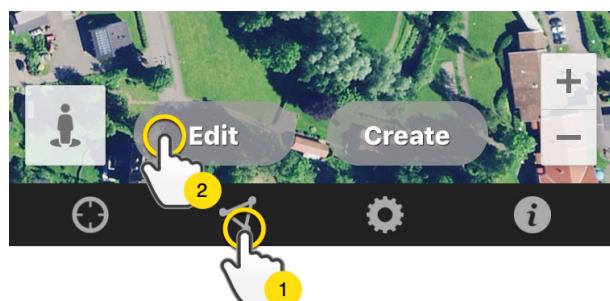


- In the list, select a GeoFence that you want to edit (3).
- To delete a Geofence, click on the dustbin (4).
- Create/Change a Geofence area's name (5) in the text field.
- Click on "Edit area" (6) to edit the area's size or location.
- Select "Enter"(7) or "Leave"(8) or both to create an alarm
- Select (9) the units to be affected by the area.
- Finish editing by clicking "Save".

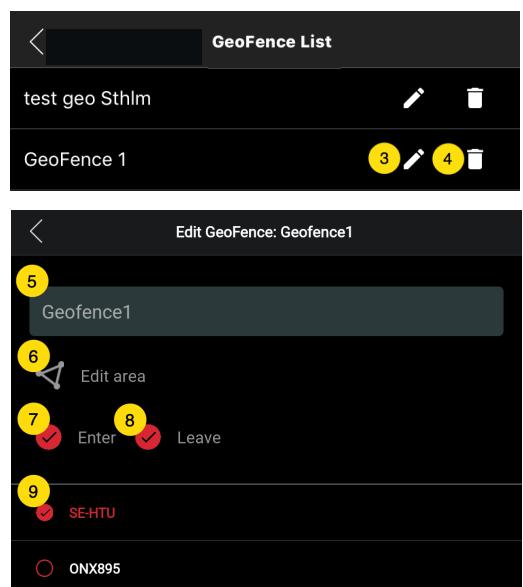

 To disable a geofence without removing it, deselect all units when edit.

## Tooltip

Infobox (so-called "Tooltip") contains information of the most recent position.

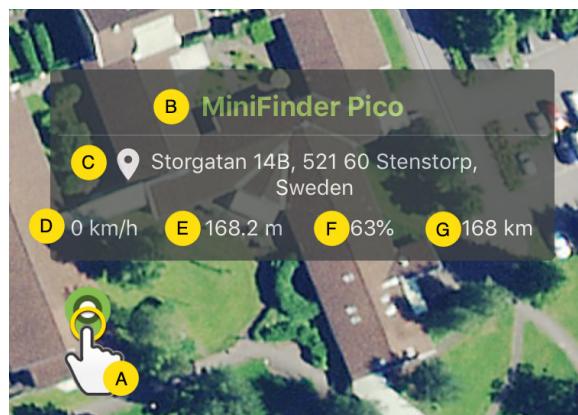


- A) Click the pushpin (or on the device in the menu) to bring up the properties box
- B) Unit name
- C) Location
- D) Speed
- E) Altitude
- F) Battery level
- G) Distance between you and the selected device


# Tag Function (Mark Places)

On the map in the MiniFinder GO APP, you can mark places with particular information.

- Long press on the place where you want to mark on the map. (1)
- You can give a name (2), a description (3), an icon (4) on the map and even attach an image (5).
- Press "Create" (6) to save.

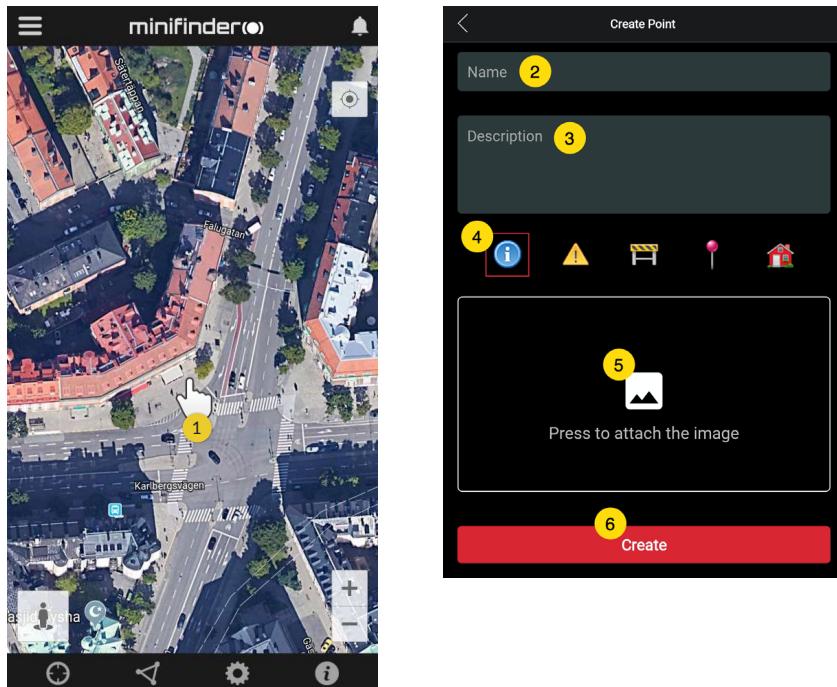

- Press the icon on the map (1) to edit the marked place and save the changes (2) or delete (3).

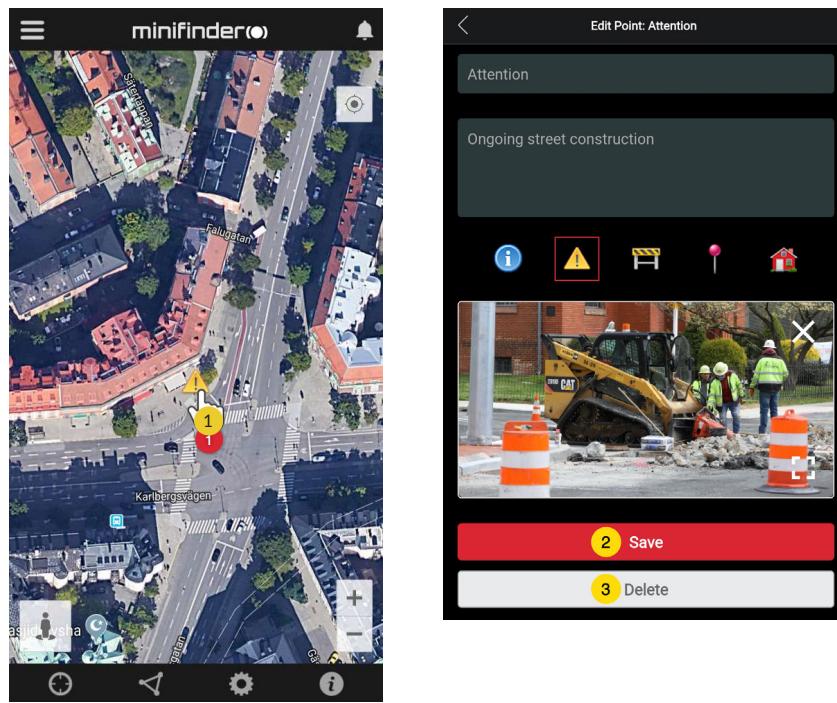


# APP Settings

- Click on the gear symbol to make settings in the MiniFinder GO APP.



- Settings Menu.

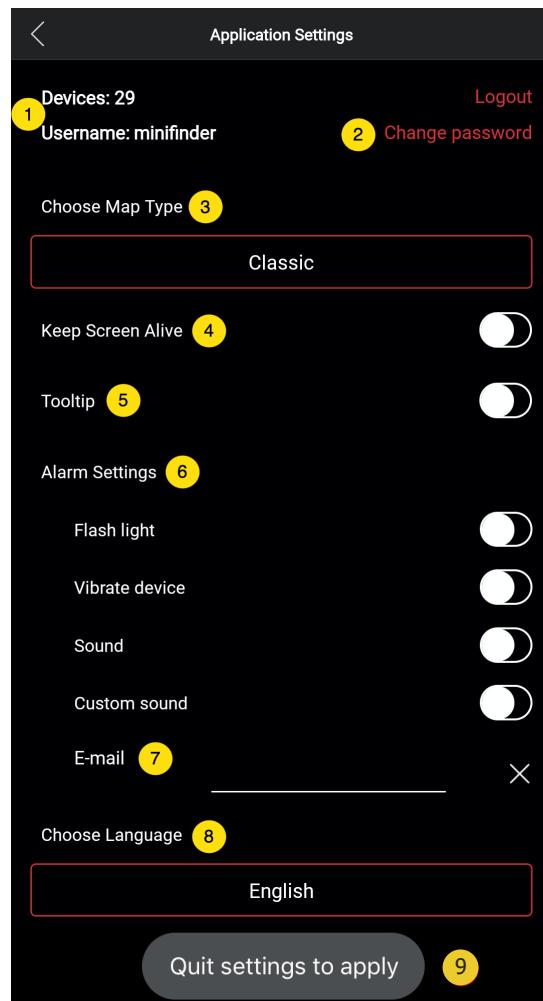

1. Number of licenses and your username.
2. Change your password.
3. Map selector (Classic, Hybrid, Terrain and Satellite)
4. “Keep Screen Alive” keeps your mobile device’s screen on until it is turned off manually. The setting may involve increased battery usage for your mobile device depending on settings.
5. “Tooltip” shows information of your GPS above the map pin. Disable this if you do not wish to view the information.
6. Alarm settings defines what your mobile device would react when alarms are triggered.
7. Enter an email address to receive emails notification when alarm are triggered.
8. Change a language:  
English, Swedish, German, Finnish, French.
9. Simply quit the settings to apply changes.

## MEMORY FUNCTION

The unit has a built-in 8 MB flash memory. The memory stores GPS information when coverage of GSM networks is omitted (eg in sparsely populated areas, indoors, underground locations, etc.). Stored positioning data is automatically transmitted as soon as GSM coverage is available again. This function depends on the additional service of MiniFinder GO. Contact your dealer for more information.

## SAFETY STATEMENT

This equipment has been tested to comply with safety certificate in accordance with the specifications of the standard: EN 60950-1: 2006 + A12: 2011.

## IMPORTANT SAFETY INSTRUCTIONS

- Please read these instructions.
- Please keep these instructions.
- Please follow all instructions.
- Please take heed of all warnings.
- Do not open the unit. Substances in this product and / or the battery can damage the environment, and / or human health if handled improperly.
- Do not tamper with your MiniFinder®.
- Do not use abrasive cleaners to clean your MiniFinder®.
- Do not put your MiniFinder® in a dishwasher, washing machine or dryer.
- Do not expose your MiniFinder® to extremely high or low temperatures.
- Do not bring your MiniFinder® into a sauna or a steam bath.
- Do not leave your MiniFinder® in the direct sunlight for a long time.
- Do not place your MiniFinder® near an open flame.
- Do not throw your MiniFinder® in a fire. The battery can explode!
- Do not attempt to disassemble a MiniFinder®, it contains non-replaceable components
- Never let children under 3 years of age play with MiniFinder®. Small components can be a choking hazard for them.

## BUILT-IN BATTERY PRECAUTIONS

- Do not attempt to open the built-in battery by force.
- Do not try to replace your MiniFinder® battery. It is built in and can not be replaced.
- Please charge the battery in accordance with the instructions provided with this guide.
- Use only CE certified charger to charge the battery. **NOTE:** DO NOT use a so-called "Fast Charger".
- Please charge your MiniFinder® with the help of a certified computer, hub or power supply.

## RECYCLING INFORMATION



The symbol on the product or its packaging means that this product must be disposed of separately from ordinary household wastes at its end of life. Please be aware that this is your responsibility to dispose the electronic equipment at recycling centers to help conserve natural resources.

## TECHNICAL SPECIFICATION

|                       |                                     |
|-----------------------|-------------------------------------|
| Size                  | 60 mm x 41 mm x 16 mm               |
| Weight                | 35g                                 |
| Battery               | 900 mAh Li-ion, rechargeable        |
| GSM Frequency         | 850/1900mhz 900/1800MHz             |
| Charging Voltage      | Micro USB, DC 4.2V~5.5V/400mA       |
| Operating Temperature | -10°C to +60°C                      |
| Fix Time Against GPS  | Active 1s, Warm 35s, Cold 45s       |
| GPS Sensitivity       | -158dB                              |
| Power Consumption     | 45mA Standby                        |
| GPS Chip              | u-Blox 7, AGPS support (Swiss Made) |
| Standby               | Up to 20 days                       |
| Memory                | 8Mb                                 |
| IP Class              | IP65                                |

## NOTES

**minifinder** ®

[www.minifinder.com](http://www.minifinder.com)