

MiniFinder® Nox

Product Manual



Table of Contents

<u>Package Contents</u>	1
<u>Product Management MiniFinder Nox</u>	1
<u>Product Management Charging Base</u>	2
<u>Explanation of LED lights</u>	3
<u>Pairing process</u>	4
<u>Explanation of Voice Notifications</u>	4
<u>SOS Alarm Function</u>	5
<u>SOS Alarm via Charging Base</u>	5
<u>Fall Alarm</u>	6
<u>Call Function</u>	6
<u>Silent Mode</u>	6
<u>Specifications</u>	7

Package Contents

- 1 MiniFinder Nox
- 2 Charging Station
- 3 Power Adapter



Product Management MiniFinder Nox

- 1 Charge Before First Use**
Please charge the device for at least 3 hours before using it for the first time.
- 2 While Charging**
The red LED light will blink slowly solid during charging. Once the device is fully charged, the red LED will have a steady light.
- 3 Charging the Device**
Place the device in the charging base, with the charging pins facing each other.
- 4 Power On**
Press the call button for 1 second, all the LED lights will flash rapidly.
- 5 Power Off**
Press and hold the call button and SOS button together for 3 seconds until the LEDs turn off.



Product Management Charging Base

1 Set up

Connect the USB-C cable from the charging base to the adapter and plug it into the socket.

2 Charge the device

To charge your MiniFinder Nox using the charging base, place the device in the charging base. You will then hear a voice message confirming that charging has started.

3 While charging

 
The LED light on the charging base will remain white during charging. Please note that the charging base does not have a built-in battery.

The red LED light on MiniFinder Nox should blink while charging and remain solid when fully charged. See more detailed information about the LED light indicators for MiniFinder Nox on the next page.



Explanation of LED Lights

GREEN LED:



Off = Invalid SIM Card

Slow single flash = Nox is connected to the network

RED LED:



 
Off = Battery level above 20%

Slow flash = Charging

Rapid flash = Battery level below 20%

Steady light = Fully charged

BLUE LED:



Off = Positioning failed

Single slow flash = Position found



Pair the Device With Charging Base

1 Why do I need to pair?

In order to make SOS alarm from the Charging Base, you need to pair MiniFinder Nox with the charging base.

2 Pairing process

Press and hold the mute button on MiniFinder Nox and SOS Button on the charging base at the same time for 3 seconds. Once the pairing is successful, you will hear a voice notification confirming this. When you hear the voice notification, release the buttons and then press the SOS button on the charging base once to complete the pairing process

Explanation of Voice Notifications

A Your mobile alarm is charging

Your MiniFinder Nox has been plugged in to a power source and is now charging.

B Battery is low, please recharge your battery

Your MiniFinder Nox is running out of battery and you should charge it soon. This will be repeated 3 times.

C Your alarm has been activated, press the SOS button to stop

The SOS-alarm has been activated. Press the MiniFinder button to cancel the alarm before it starts calling.

D Fall alarm has been activated, press the SOS button to stop

Your MiniFinder Nox has activated the fall alarm. Press the MiniFinder button to cancel the alarm.

E Calling contact number X

The device is now calling the authorized phone numbers you set up in the app. It will proceed with the next phone number if the current one doesn't respond.

SOS Alarm Function

To **activate** the SOS alarm, press and hold the SOS button for 3-5 seconds until you hear a voice confirming that your SOS alarm has been activated. Once the alarm notification is initiated, you have 8-10 seconds to **cancel the alarm**. After this, your emergency contacts will be notified about your SOS Alarm.

Note: If your device is set to mute, the alarm will start immediately.

SOS Alarm via Charging Base

You can activate an SOS alarm using the button on the charging base. Press and hold the button for 3-5 seconds. The LED light will flash for 10 seconds to indicate that the SOS alarm has been initiated. The LED light will then return to a steady white light.

Note: To activate an SOS alarm from the charging base, you must first pair your MiniFinder Nox with the charging base. See instructions on page 4.



Fall Alarm

MiniFinder Nox can automatically detect a fall. When this occurs, the device will play a voice message confirming that a fall has been detected and that the fall alarm has been triggered. The user can **cancel** the fall alarm by pressing the MiniFinder Button (SOS button). If the alarm is not canceled within the preset time, the device will start calling the emergency contacts.

Note: If your device is set to mute, the alarm will start immediately.

Call Function

To make a call, press the Call Button for 3 seconds and you will hear a beep. The device will now dial the pre defined number. This you choose in the MiniFinder Live app.

To **end** the call, press the SOS Button.

Silent Mode

You can **activate silent mode** on the device. To activate, double-click the mute button to turn off voice warnings. To **turn off silent mode**, double-click once more to turn on voice warnings.

Specifications

Dimensions	67 mm x 38 mm x 15 mm
Weight	43g
Battery Life	36-40h with 5 minutes interval
Connectivity	LTE/4G (CatM1), GSM
Power Source	5V DC 1.0A
SIM	Preinstalled
Voice call	Yes
Fall sensor	Yes
Waterproof	Yes, IP67

Memory

The device is equipped with a built-in 16 MB flash memory. This memory stores GPS data when GSM network coverage is unavailable (e.g., in rural areas, indoors, underground locations, etc.). The stored location data is automatically transmitted as soon as GSM coverage is restored.

Safety Declaration

This equipment has been tested and found to comply with safety certification requirements according to the specifications of EN Standard: EN60950-1: 2006 + A12: 2011.

Important Safety Instructions

Read these instructions carefully.

Keep these instructions for future reference.

Heed all warnings.

Follow all instructions.

Do not tamper with your MiniFinder®.

Do not use abrasive cleaners to clean your MiniFinder®.

Do not place your MiniFinder® in a dishwasher, washing machine, or dryer.

Do not expose your MiniFinder® to extremely high or low temperatures.

Do not use your MiniFinder® in a sauna or steam room.

Do not leave your MiniFinder® in direct sunlight for extended periods.

Do not place your MiniFinder® near an open flame.

Do not attempt to disassemble your MiniFinder®; it contains no user-serviceable parts.

Recycling Information

The symbol on the product or its packaging indicates that this product must be disposed of separately from household waste at the end of its service life. Please be aware that it is your responsibility to dispose of electronic equipment properly at designated recycling centers, in order to help conserve natural resources.